

RS-232/ RS-422 轉換器線路

RS-232/422 – Trunk Controller Wire Connection:

